

26451 Curtiss Wright Pkwy, Ste 106 Richmond Heights, Ohio 44143 440.569.1818 • www.jccarternozzles.com




Nozzle Operation Instruction Guide

I. ENGAGING THE NOZZLE

STEP 1


Remove protective cap from and blow moisture and dirt from Nozzle and Receptacle with dry compressed air or nitrogen.




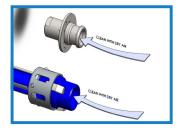

STEP 2


Slide Nozzle onto Receptacle until latches are locked onto Receptacle.

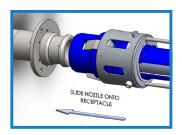

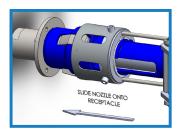

STEP 3

Push handles toward Receptacle. Once handles are fully forward, fueling can begin.

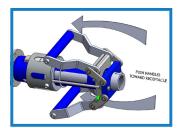


BEGIN FUELING

SEE REVERSE SIDE FOR DISENGAGING THE NOZZLE

II. DISENGAGING THE NOZZLE


STEP 1

Pull handles until the plate stops at the retaining ring.

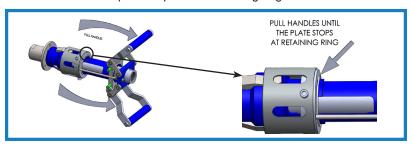


STEP 2


Allow trapped gases to vent completely.

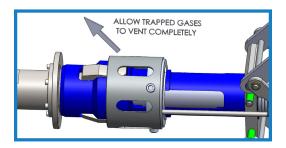

STEP 3

Pull handles back completely to remove Nozzle.

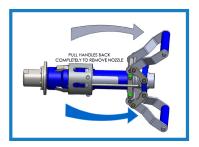

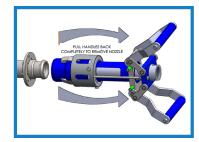



PROPRIETARY AND CONFIDENTIAL. THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE PROPERTY OF JC CARTER LLC. ANY REPRODUCTION IN PART AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF JC CARTER LLC IS PROHIBITED