





## Nozzle Operation Instruction Guide

### I. ENGAGING THE NOZZLE



#### **STEP 1**

Remove protective cap from and blow moisture and dirt from Nozzle and Receptacle with dry compressed air or nitrogen.

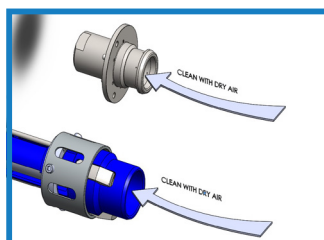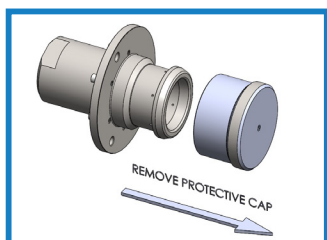


#### **STEP 2**

Slide Nozzle onto Receptacle until latches are locked onto Receptacle.

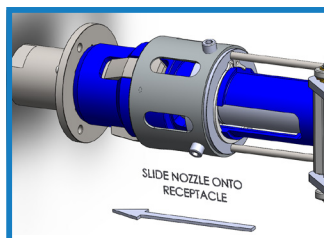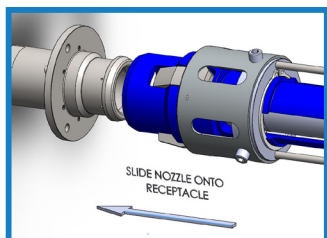

#### **STEP 3**

Push handles toward Receptacle. Once handles are fully forward, fueling can begin.

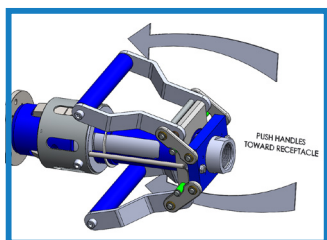


**BEGIN  
FUELING**

**SEE REVERSE SIDE  
FOR DISENGAGING  
THE NOZZLE**

## II. DISENGAGING THE NOZZLE


### STEP 1

Pull handles until the plate stops at the retaining ring.

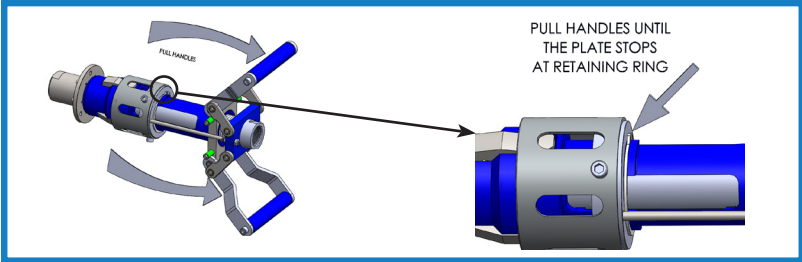

### STEP 2

Allow trapped gases to vent completely.

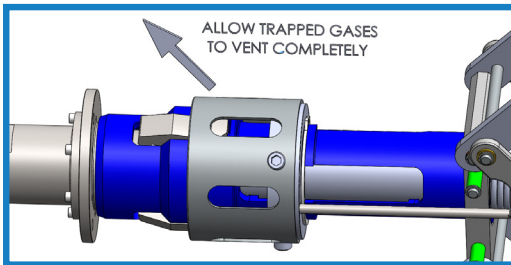

### STEP 3

Pull handles back completely to remove Nozzle.

