

CAUTION




FAILURE TO CLEAN NOZZLE AND RECEPTACLE PRIOR TO OR AFTER FUELING IS HAZARDOUS

Procedure 1


Connect grounding to vehicle

Remove receptacle protective cap

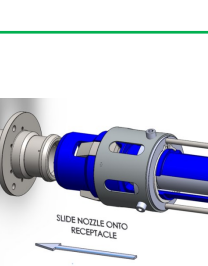


Procedure 2

Clean with dry compressed air. Ensure no dirt or ice is visible on either the nozzle or receptacle.

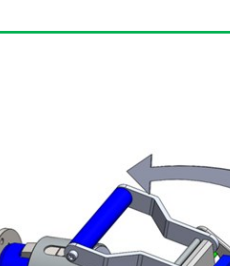


Procedure 3

Slide the nozzle onto the receptacle until housing is squarely stopped by the receptacle flange.

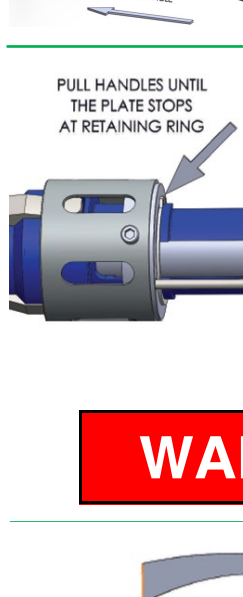

Procedure 4

Push handles towards the vehicle as far as they will go.


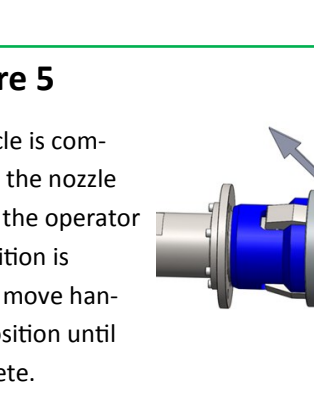


Connection is complete.

Start the fueling process.

Procedure 5

When fueling cycle is complete, slowly pull the nozzle handles towards the operator until venting position is reached. **Do Not** move handles past vent position until venting is complete.

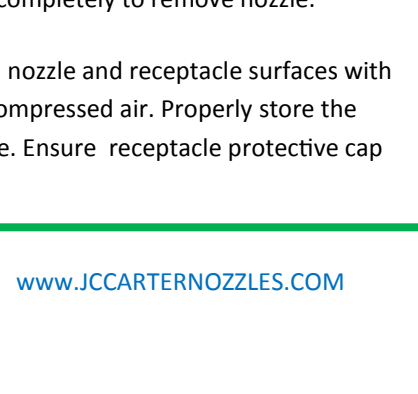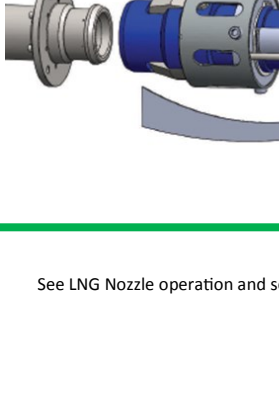

WARNING

IF VENTING CONTINUES, RECONNECT THE NOZZLE AND REPORT INCIDENT

Procedure 6

When venting is complete, pull handles back completely to remove nozzle.

Clean nozzle and receptacle surfaces with dry compressed air. Properly store the nozzle. Ensure receptacle protective cap is on.

